4. Disassembly and Reassembly

4-1 Main Body

1. While keeping the door handle open, separate the Dust-Cover and Body-Control Assemblies from the main body (use a screwdriver).

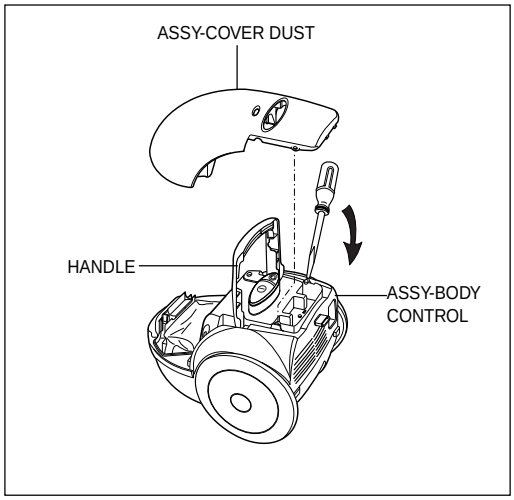

2. Separate the Indicator Assembly from the Dust-Cover assembly. (Pull it from the left and right hooks. Use a screwdriver.)

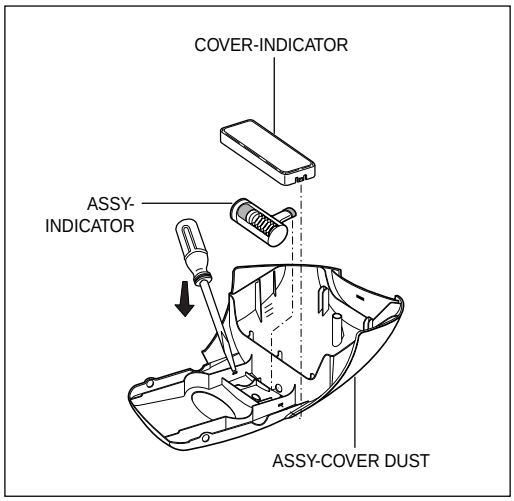

3. Loosen the three screws (4 x 16). Separate the Body-Control Assembly from the Main Body.

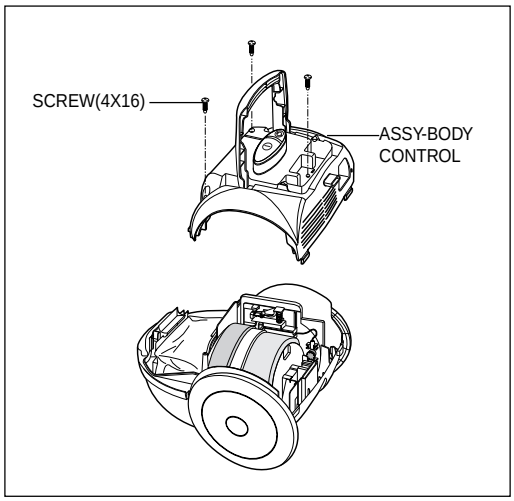

4. Disassemble the handle. (push the left and right hooks when disassembling.)

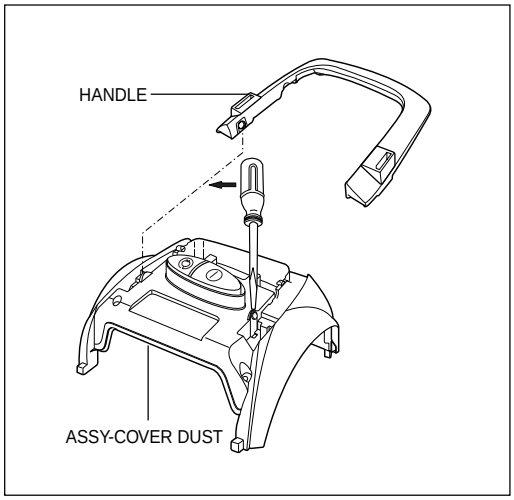

5. Disassemble the Cord-Reel Button and ON/OFF Button and Main switch from the Body-Control Assembly as shown in the diagram.

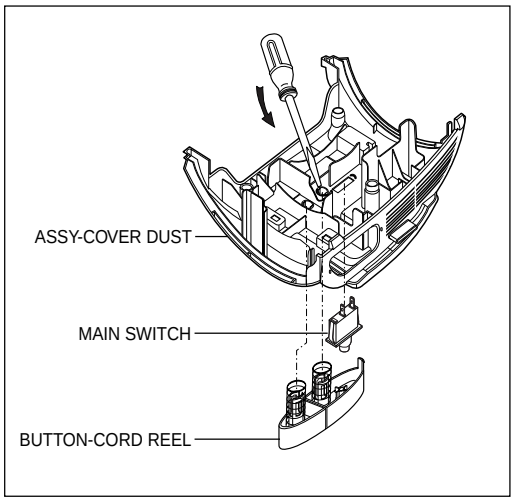

6. Disassemble the Cord Guard as shown in the diagram.

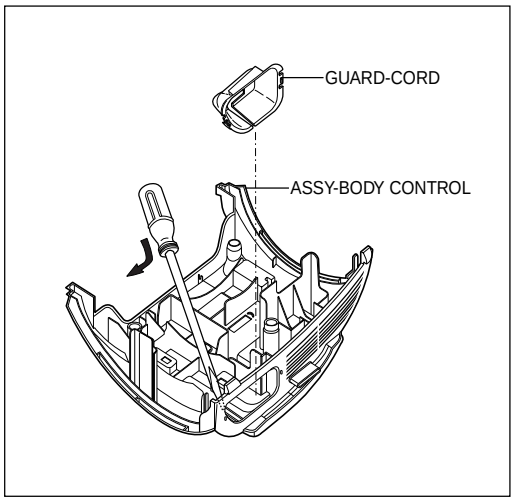

7. Separate the Cord-Reel, Main PCB and Motor Assemblies from the body.

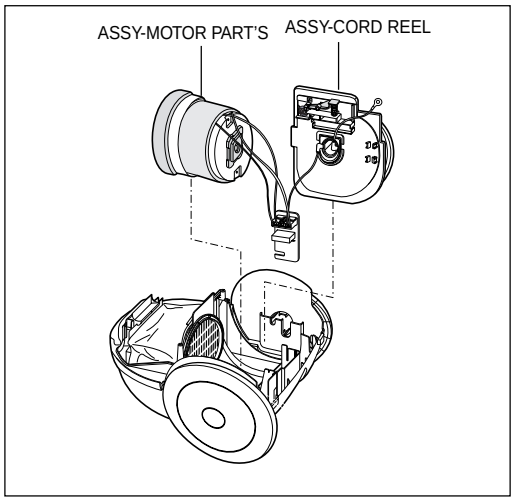

4-2 Exchanging the Motor

Separate the CUSHION-MOTOR.F and CUSHION-MOTOR.B

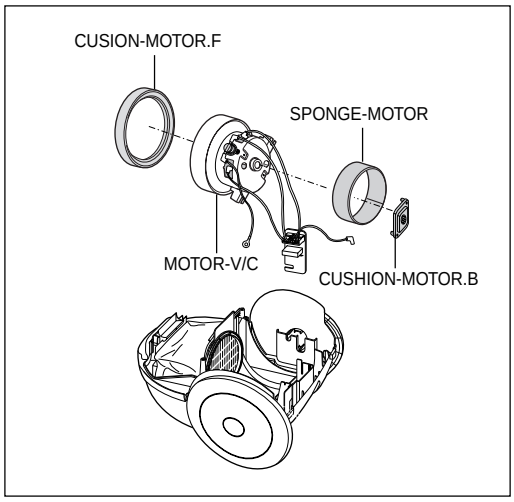

4-3 Replacing The Cord Reel

1. Separate the Cord Reel from the Main Body.
2. Hold the reel cover and wind the power cord to the left 5 times, and quickly assemble the reel onto the body,holding the reel not to reverse.

Warning:

Be careful not to wind the cord in reverse (this might cut off the spiral spring or force it to pop out).
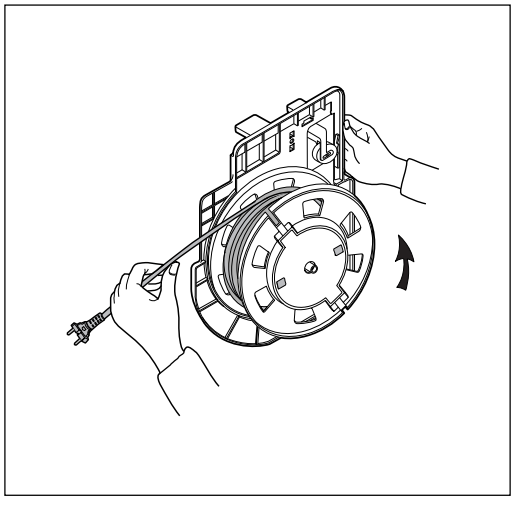
Before assembling, the winding speed setting should not exceed 5 (higher settings might be dangerous).